


ASINS-BBC42.1

ASSEMBLY INSTRUCTIONS

INSTRUCTIONS D'ASSEMBLAGE

INSTRUCCIONES DE MONTAJE

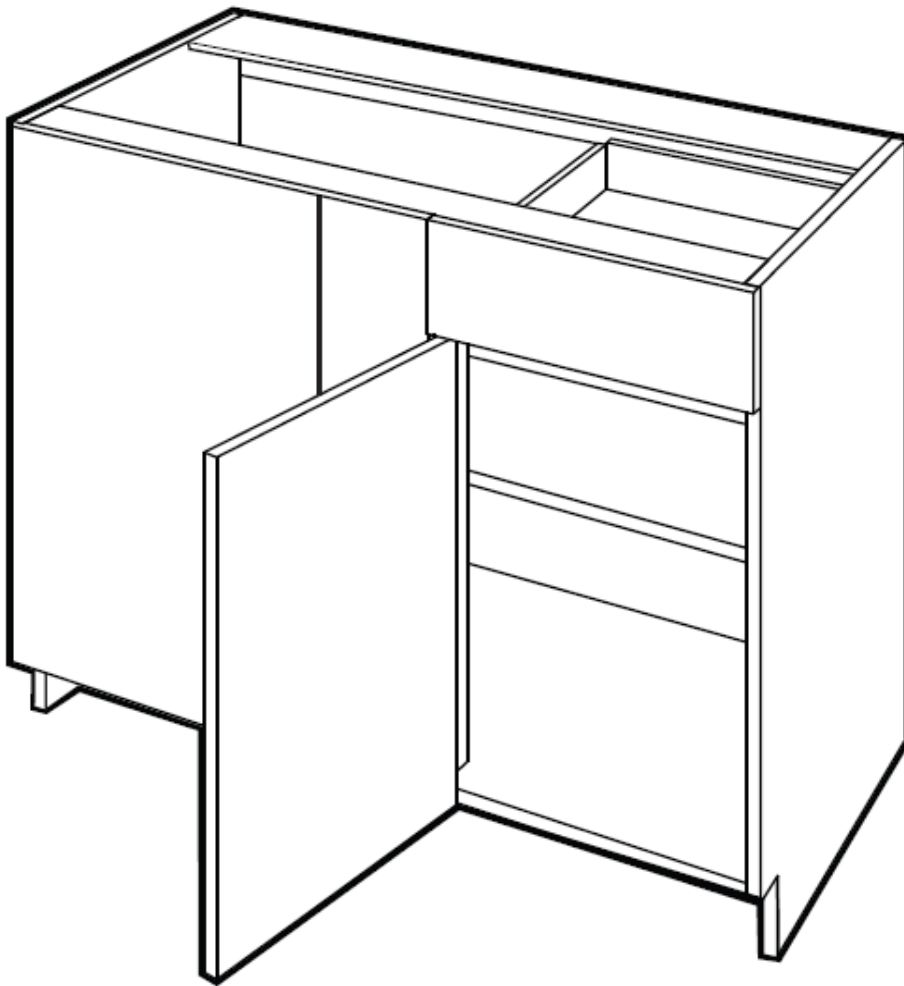


BASE BLIND CORNER CABINET


MEUBLE DE BASE AVEC COIN CACHE

GABINETE DE BASE CON RINCON ESCONDIDO


1

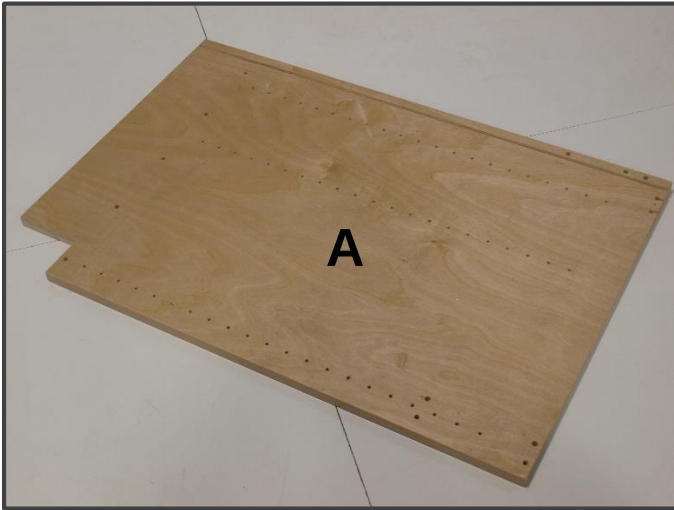


2

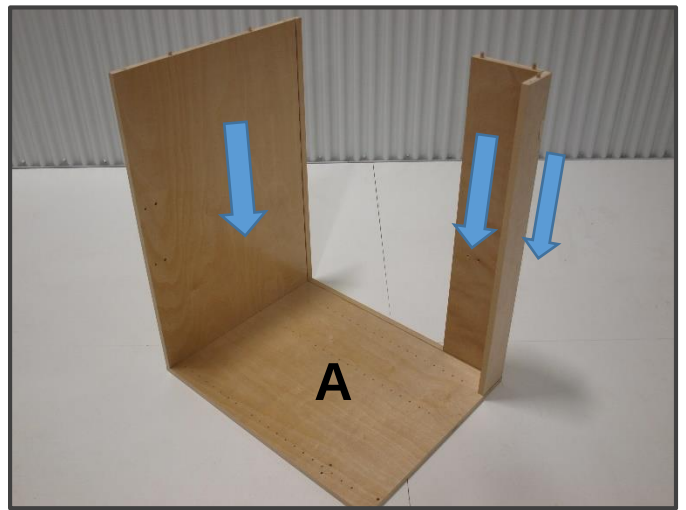


3

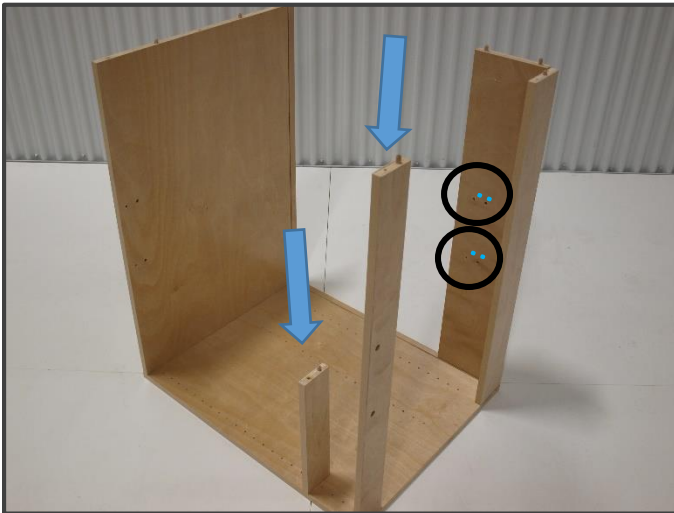


4

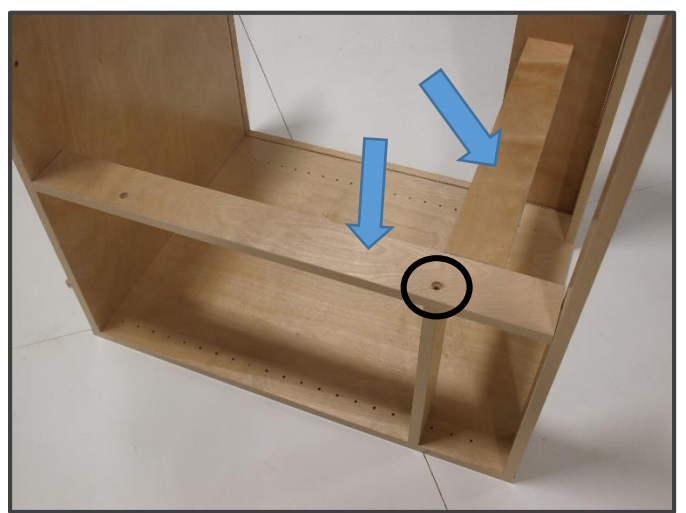


5

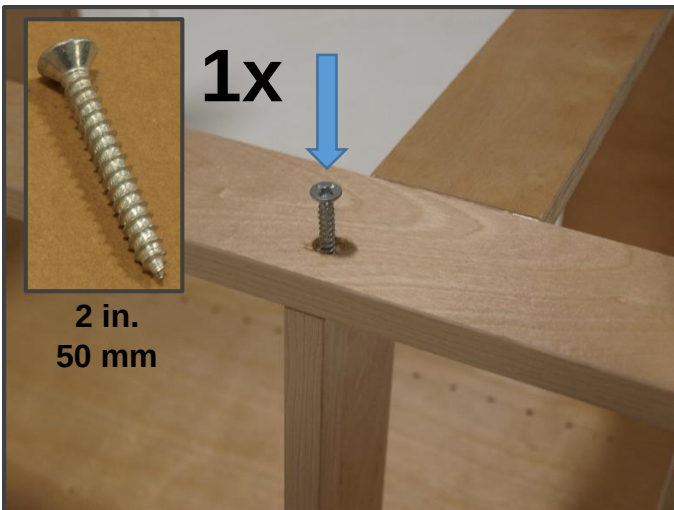


6

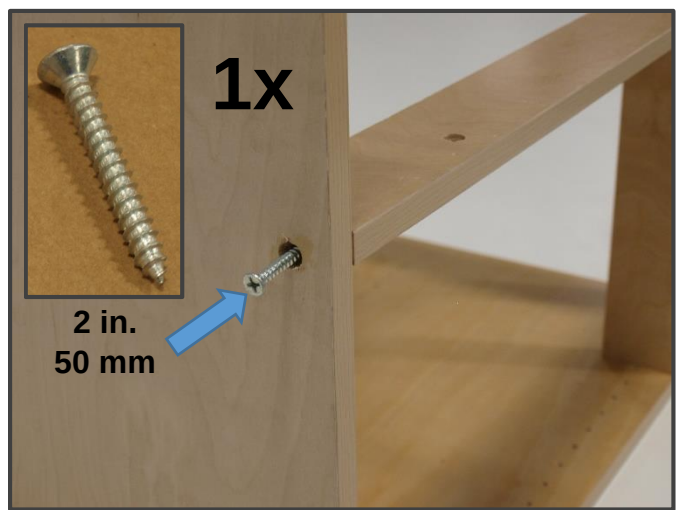


7

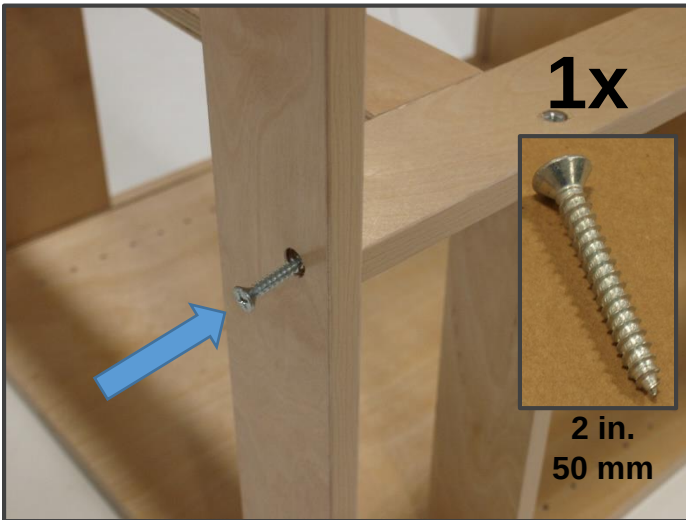


8

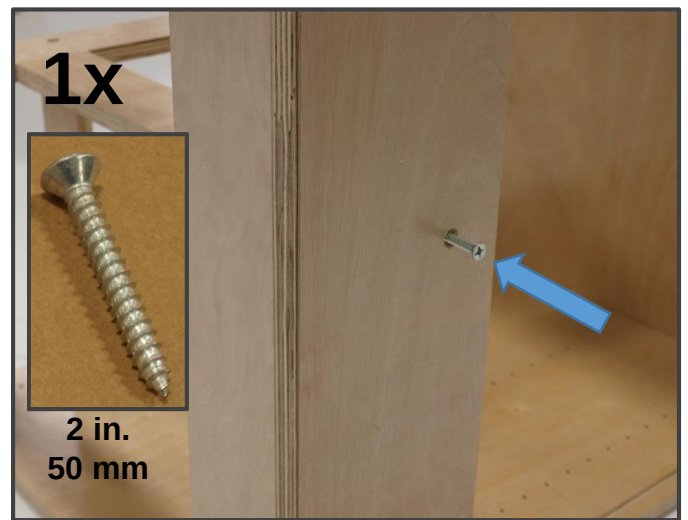


9

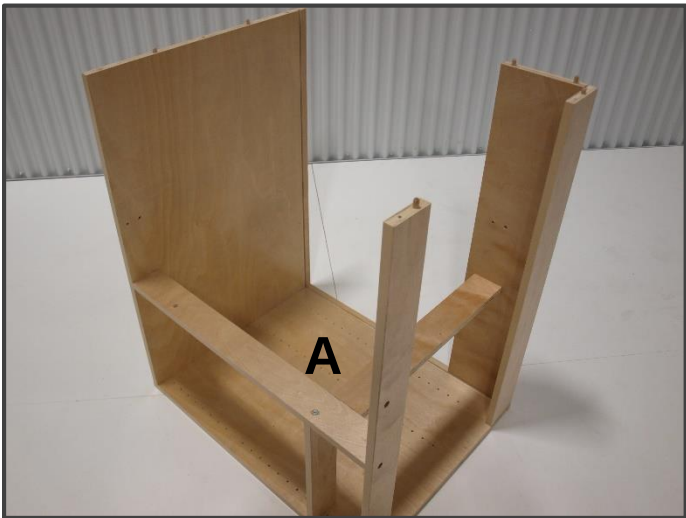


10

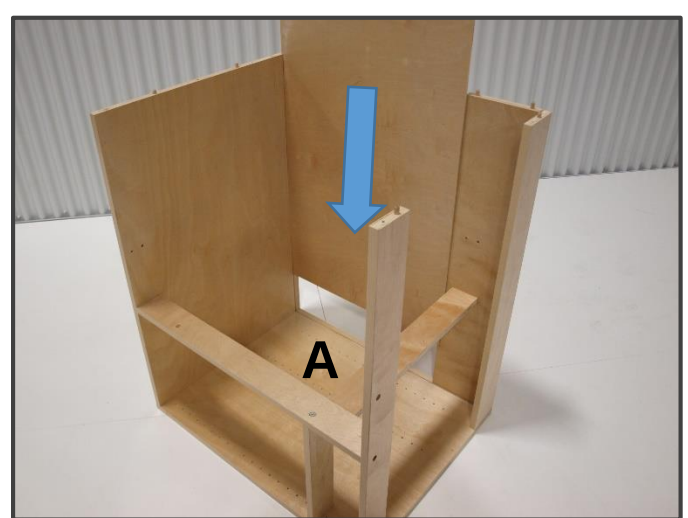


11

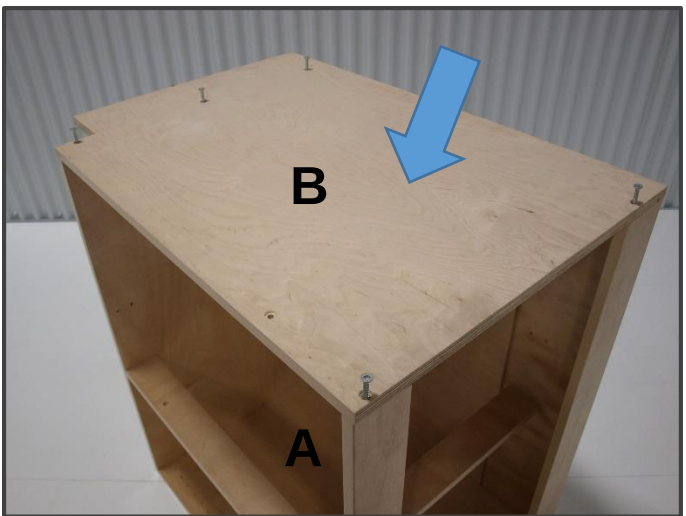


12

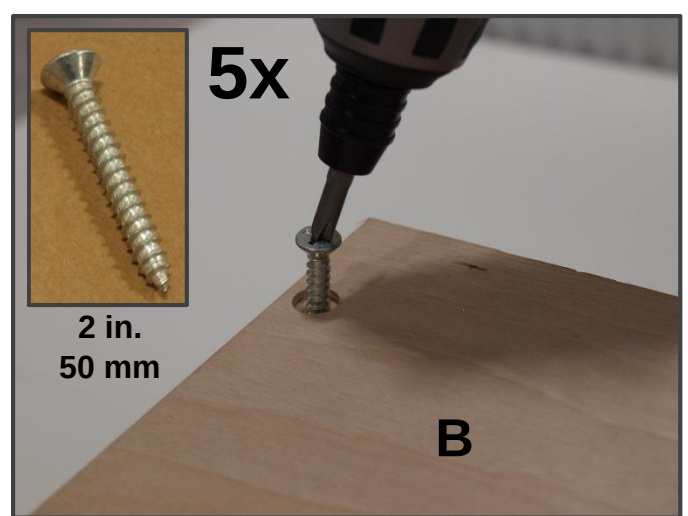


13

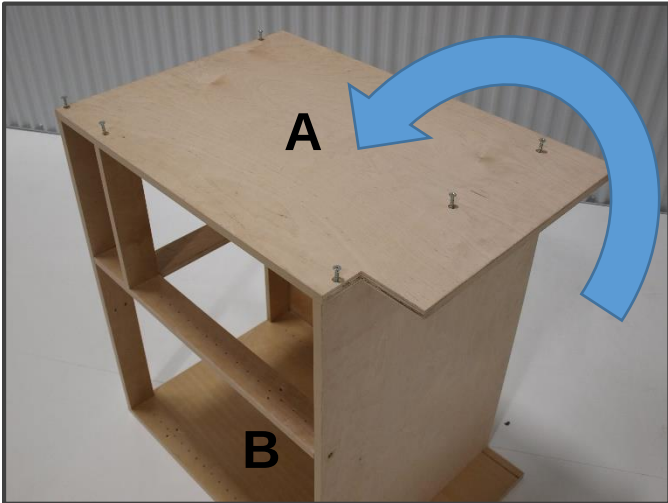

14

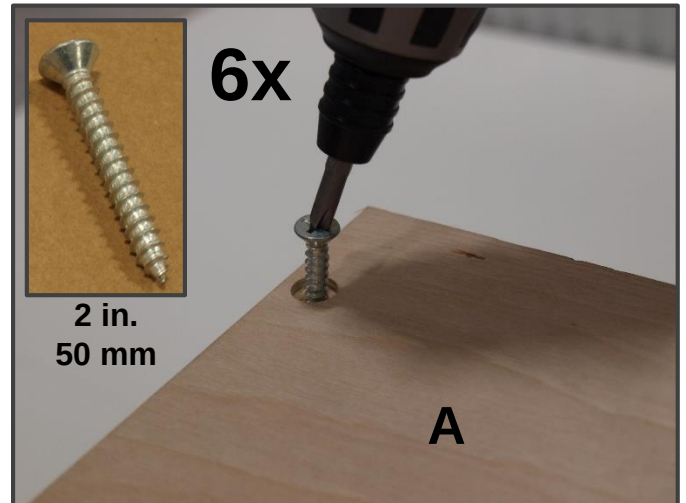


15

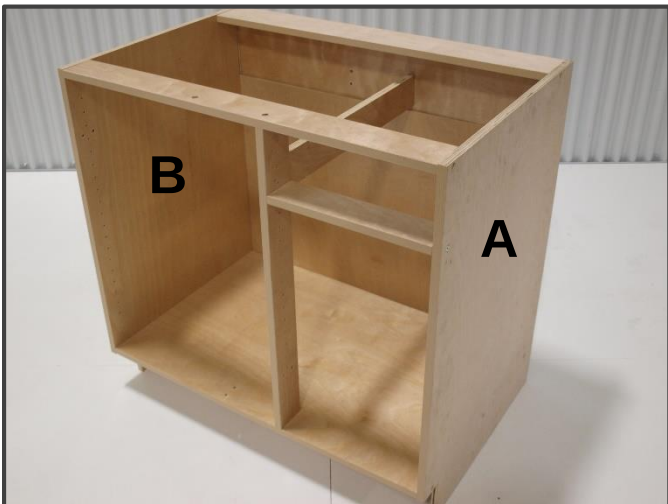

16




17

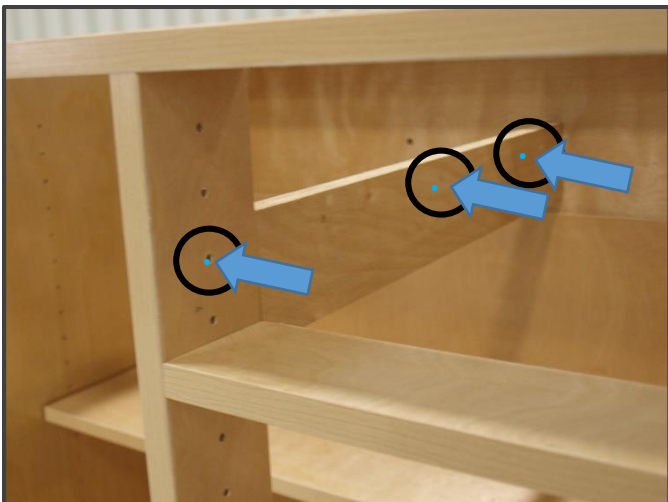


18



19

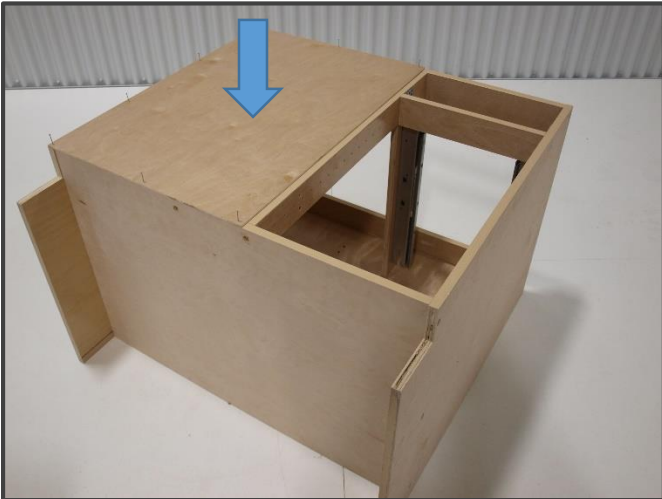


20

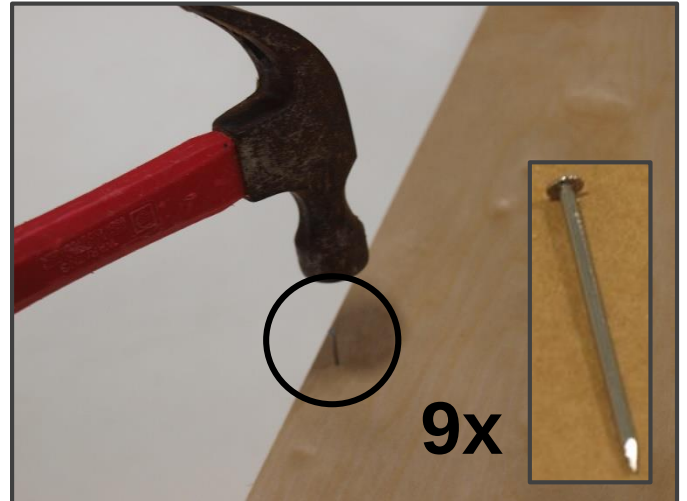

21



22

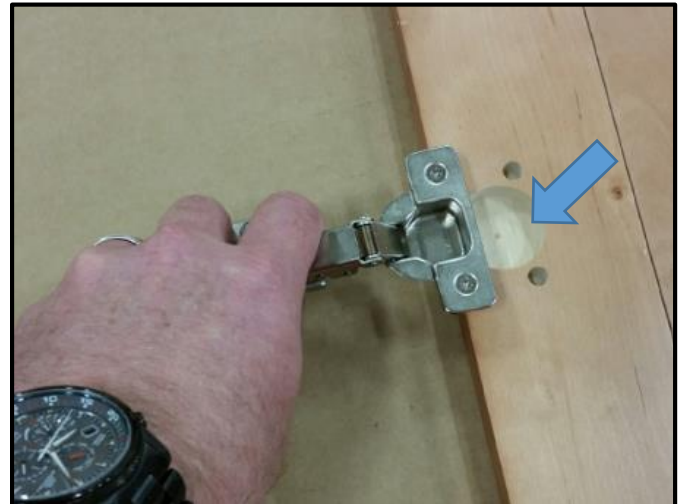

23



24




25




26




27

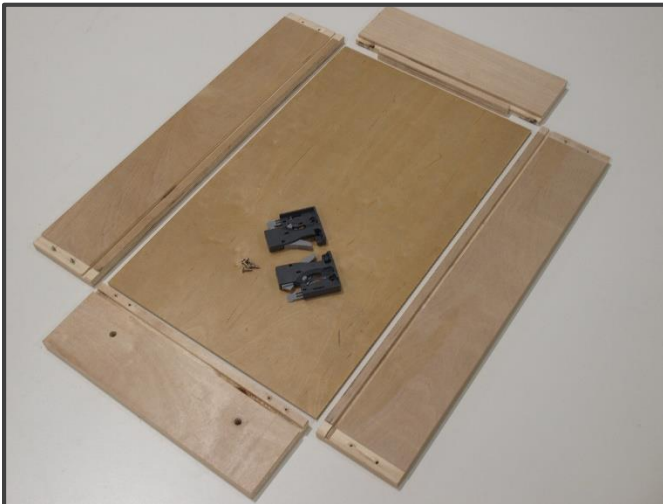


28

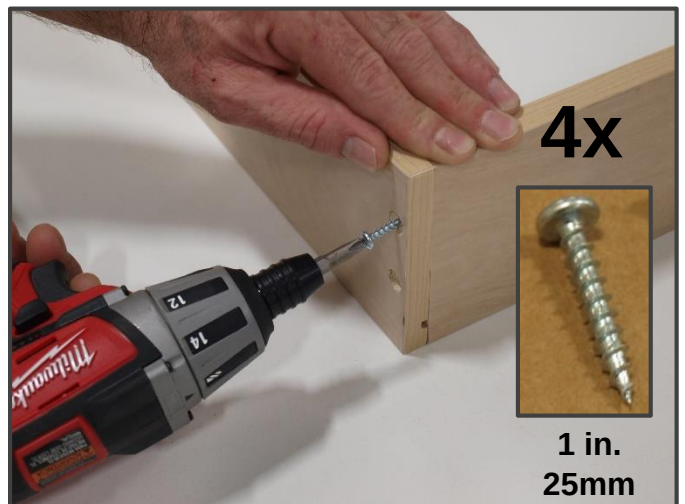

29

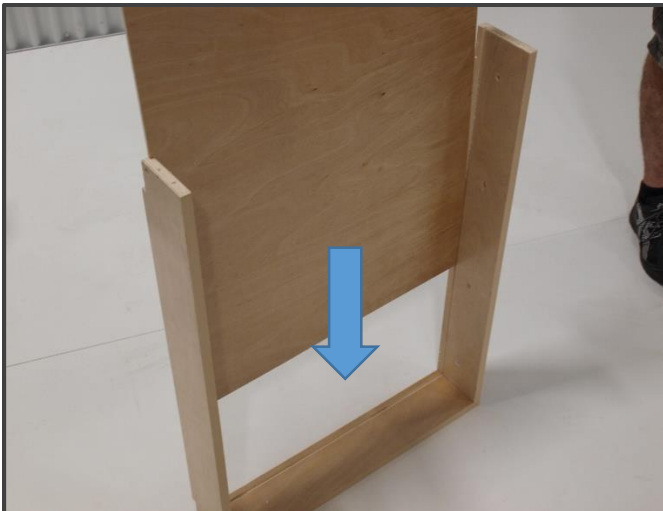

30

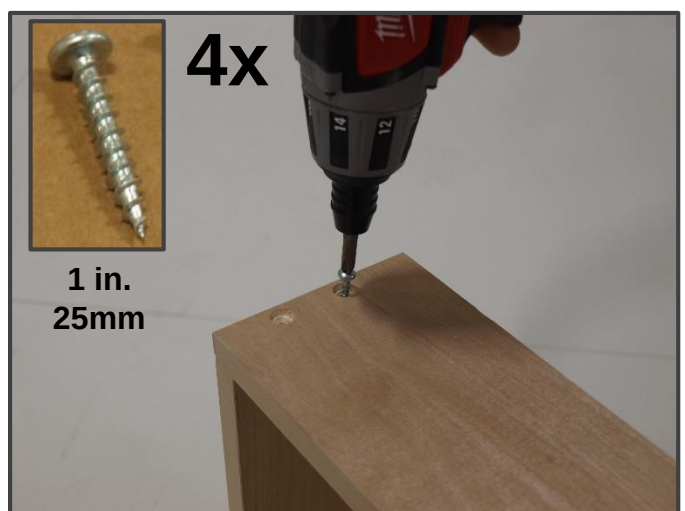


31




32




33

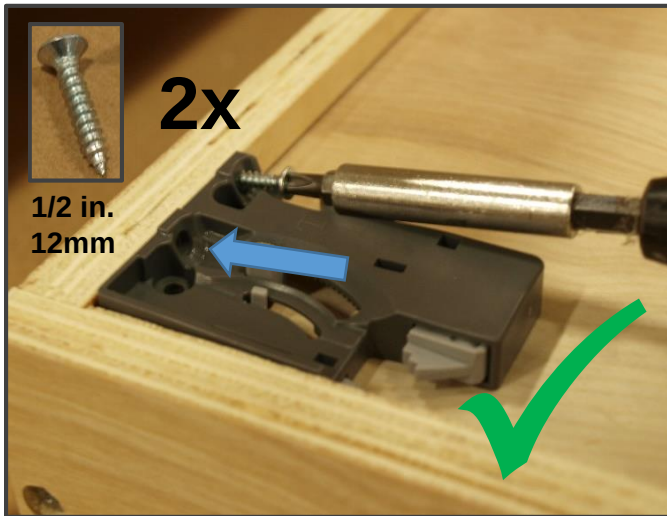


34

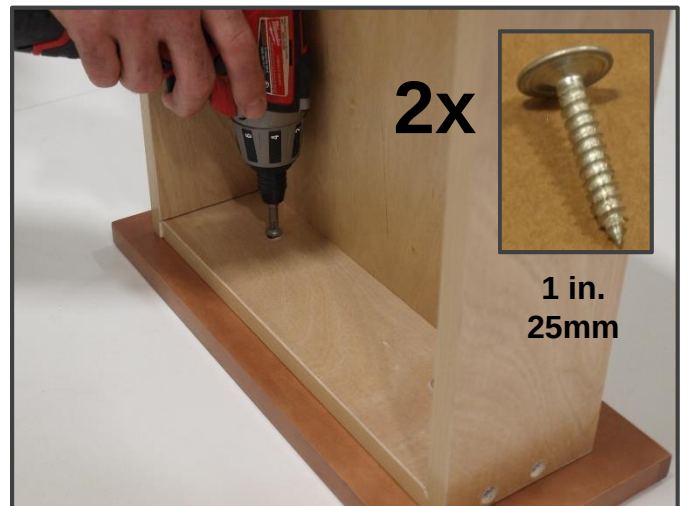


35

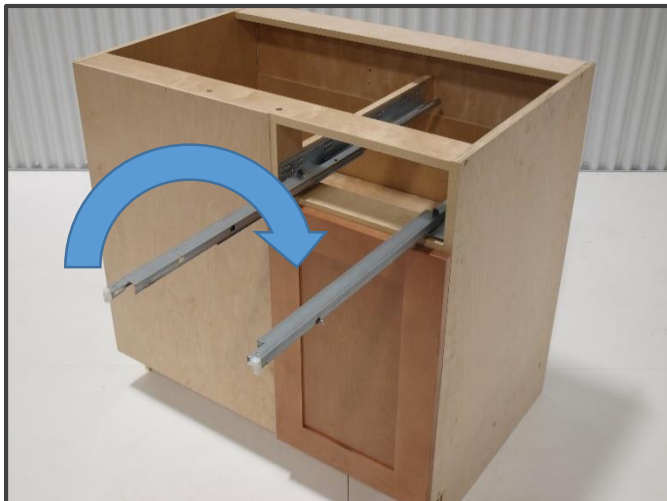


36

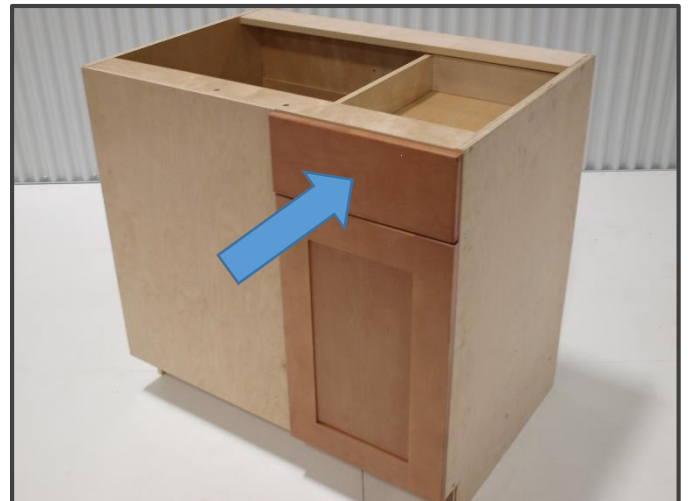

37

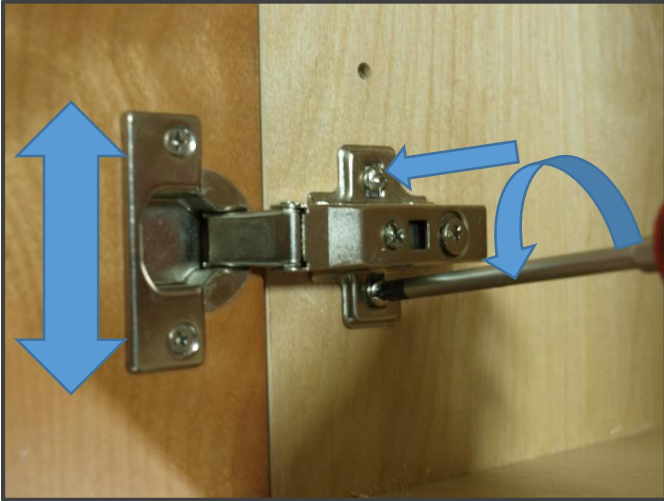

38

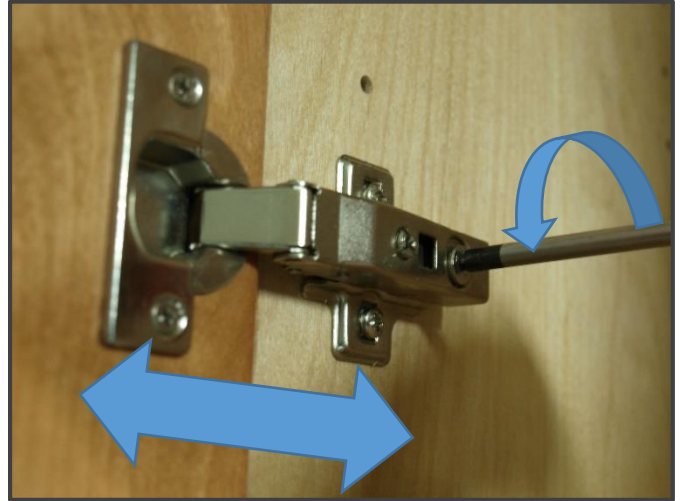

39

